


## **Removing Toner Shipping Locks**

Sometimes the shipping locks vary in location, so please check each cartridge carefully.

1) Locate any plastic clips and remove them



2) Pull the plastic line to remove it from the cartridge

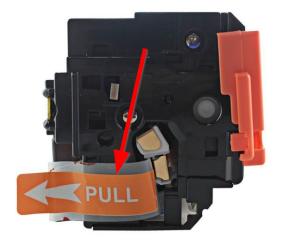

3) Check for any other shipping locks before installing.